


Opel Mokka X 2016-



Konsole wie abgebildet positionieren
Linkes Blech einschieben



Position console as illustrated
Insert left metal plate

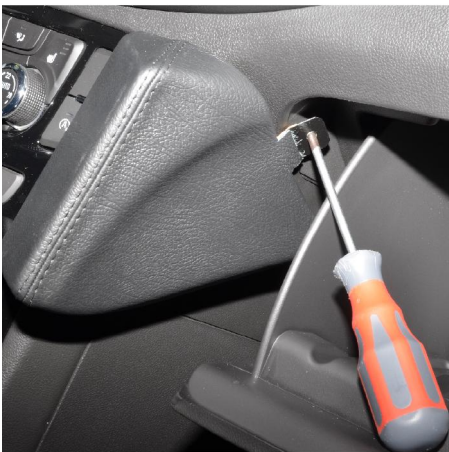

Innerhalb des Handschuhfaches die beiliegende Schraube ins Blech
eindreihen





Mount enclosed screw into metal plate within glove box




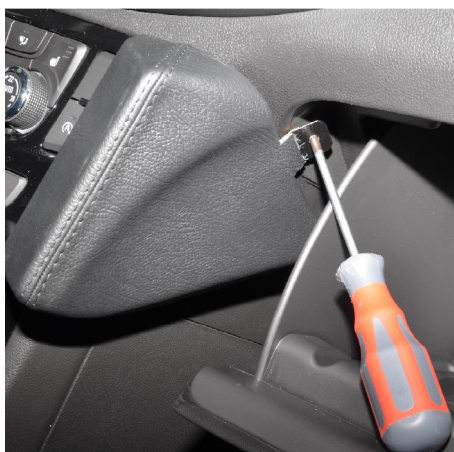
Änderungen vorbehalten Subject to change

Opel Mokka X 2016-

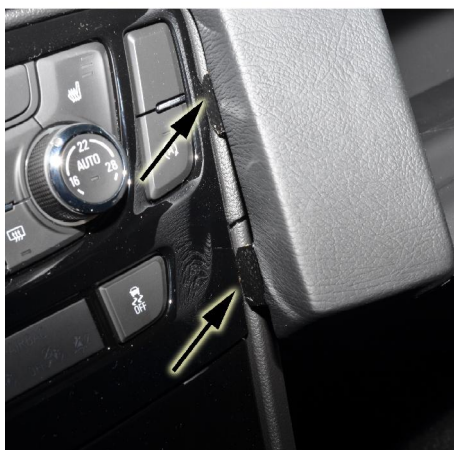


 Positionnez la console comme illustré
Insérez la gauche toile

 Posicione la consola como mostrado
Introduza la chapa izquierda



 Vissez la vis jointe à l'intérieure de la boîte à gants dans la tôle

 Dentro de la guantera atornille el tornillo adjunto en la chapa



Nous nous réservons la possibilité de modification Salvo posibles modificaciones


Opel Mokka X 2016-



Konsole zoals afgebeeld positioneren
Linker plaat er tussen schuiven



Uchwyt umiescic jak na przedstawionym zdjeciu.
Wsunac lewa blaszke

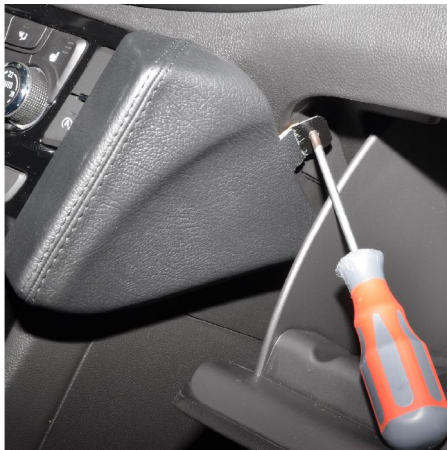

In het dashboardkastje de meegeleverde schroef in het metalen lip draaien



W wewnatrz schowka przykrecic zalaczona srube



Nous nous réservons la possibilité de modification Salvo posibles modificaciones